



Green Lion

Suction Steam Ultra Garment Steamer

SKU: GNBX200STMWH

Model No: GNBX200STM

Table of Contents

Product Overview	2
Specifications	2
Product Components	3
Control Buttons & Functions	4
Safety Precautions	4
Operating Instructions	6
Ironing Guidelines	8
Cleaning and Maintenance	8
Circuit Diagram	9
Troubleshooting	10
Disposal	11
Warranty	12
Contact Us	12

Product Overview

The Green Lion Suction Steam Ultra Garment Steamer is a 3-in-1 device that steams, irons, and vacuums clothes. It heats up in 25 seconds, providing strong suction at 5000Pa and continuous steam at 35g per minute. The detachable water tank allows for easy refills, and the built-in sealing gasket prevents leaks. The steamer also features a filter mesh for clean steam and an LED control display for easy adjustments. With three power settings and an auto shut-off function, it offers both convenience and efficient performance.

Specifications

Model No.	GNBX200STM
Material	ABS
Power	2100W
Voltage	220-240V
Frequency	50/60Hz
Heat-Up Time	0-25 seconds
Steam Output	Adjustable 15g/min, 20g/min, 30g/min
Steam Levels	3 levels (Low, Medium, High)
Tank Capacity	440ml

Suction Power	5000Pa
Working Time	13 minutes per use
Cord Length	1.8m (external length 1.65m)
Product Weight	950g
Bottle Dimensions	130x65x98mm
Steamer Dimensions	185x65x98mm

Product Components



Control Buttons & Functions

1. Power/Steam Switch (): Turns the device on or off. Adjust steam levels by pressing the button:

Min Level: One light on. ()

Mid Level: Two lights on simultaneously. () ()

Max Level: Three lights on simultaneously. () () ()

2. Suction Switch (): Controls the suction speed.

Min Speed: One light on. ()

Mid Speed: Two lights on simultaneously. () ()

Max Speed: Three lights on simultaneously. () () ()

Motor Control: Long press (3 seconds) to turn off the motor. Short press to toggle between min, mid, and max speeds or pause the motor.

3. Dry Ironing Mode (): For dry ironing without steam.

4. Water Shortage Alarm (): Alerts when there is insufficient water in the tank.

5. Self-Cleaning Mode (): To activate self-cleaning, press and hold the power button for 10 seconds. The device will start cleaning when powered off. Do not stop midway. Be cautious of potential burns.

6. Automatic Power Off: The device will automatically power off after 10 minutes of inactivity with no steam, indicated by alternating flashing of the dry ironing and steam indicators.

Safety Precautions

1. Care should be taken when using the appliance due to the emission of steam.

2. Unplug the appliance during filling and cleaning.

3. Filling, decalcifying, rinsing, or opening inspection apertures that are under pressure should not be done during use (for fabric steamers with pressurized compartments only).

4. The fabric steamer should not be used if it has been dropped, or if there are visible signs of damage or if it is leaking.
5. Do not immerse this product in water or other liquids, and do not rinse it under the tap.
6. Be careful of the hot steam generated by the garment steamer. The steam may cause burns.
7. Check if the voltage indicated on the product matches the local mains voltage before connecting the product.
8. Do not use the product if the plug, power cord, or product itself is damaged or if the product has fallen.
9. The product can only be sent to an authorized service center for maintenance. Do not attempt to repair the product yourself, as this will void the warranty.
10. If the power cord is damaged, it must be replaced by a professional from the manufacturer's maintenance department to avoid danger.
11. The user should never leave the product when it is plugged in.
12. This product is not suitable for children under 8 years old or for those who are disabled, mentally handicapped, or have cognitive disorders. If used by children aged 8 years or older, it should be under supervision.
13. Never allow children to play with this product.
14. When the product is electrified or cooling, keep the product and power cord away from children under 8 years old.
15. While using, do not touch the hot surfaces of the garment steamer. The product will produce high-temperature steam, so avoid aiming it at people or animals, and do not iron clothes while they are being worn to avoid burns.
16. Always unplug the power cord before installing cleaned products or filling the water tank.

Attention:

1. This product can only be used with a grounded electrical outlet.
2. If the product is hot/connected to the power supply, do not let the

steam nozzle contact any surface when placing the product.

3. Ensure the power cord is not damaged.

4. During operation, never leave the power cord connected to high voltage for long periods.

5. Please use this product when the water tank is full or when the water tank is running low.

6. Always ensure the water tank is empty before storing the product to avoid any potential leakage or damage.

7. Never attempt to repair the product by yourself. If any part is damaged or malfunctioning, please contact the authorized maintenance service for repairs.

8. Make sure to place the product on a stable surface during use to prevent it from tipping over.

9. When filling the water tank, do not exceed the maximum fill line to prevent water spillage.

10. If the product emits unusual sounds or smoke during operation, immediately turn off the power supply and unplug the device. Seek professional assistance for further inspection and repair.

11. Store the product in a dry, cool area when not in use. Keep it out of direct sunlight to avoid any damage to its components.

12. Keep the power cord away from hot surfaces during use to prevent it from melting or becoming damaged.

Operating Instructions

a. Before the Initial Use

1. Remove any labels or protective covers from the head of the garment steamer. Straighten and route the electric wires before using them.

2. If this is the first time the garment steamer is used, allow it to blow off some steam for several minutes. This will remove any impurities and odors that may have been left during the manufacturing process.

3. To avoid circuit overload, it is recommended not to use the same outlet as other appliances.
4. When opening the package, check all items and parts listed in the manual to ensure nothing is missing.

b. Installation and Usage

1. Take out the water tank, fill it with an appropriate amount of water, and install it into the machine by rotating it into place.
2. Connect the device to the power socket, turn on the power, and press the power switch. The machine will start preheating with a flashing red light. If the red light remains on, the machine can be used for dry ironing.
3. Press the power/steam switch again and the blue light will turn on, indicating that the 3 steam modes can be selected. Once the steam starts, it is ready for steam ironing.
4. Press the suction switch to activate the motor. Three suction power modes can be selected, allowing you to begin steam ironing with suction mode.
5. To turn off, long press the power/steam switch for 3 seconds.
6. In steam ironing mode, if the water tank is low or the water passage is blocked, the water shortage alarm indicator will flash and remind you to add water.
7. The device will automatically power off after 10 minutes of inactivity without use.

c. After Each Use

1. To turn off the product, press the power switch or unplug the power cord.
2. Remove the water tank and empty any remaining water from it.
3. Place the product on a flat surface in an upright position and allow it to cool down.

Ironing Guidelines

The garment steamer is easy to use and is designed for ironing wrinkled or creased clothing, curtains, and refreshing decorative fabrics. It can be used on most fabrics.

Note: The garment steamer is designed for vertical ironing, so it should be used with clothes hanging in a vertical position. Avoid using the steamer when clothes are in a horizontal position.


1. Check if the fabric is permeable on the back of the cloth to ensure steam does not gather and wet the cloth.
2. Check the pockets of the clothing to ensure there are no items left inside.
3. Check for any objects on the back of the clothing that may be damaged by steam.
4. It is recommended that the garment steamer should not be used around metal fittings of the clothing, as high-temperature steam can cause the metal accessories to fade.
5. When you press the steam button, you will feel a slight vibration and hear a soft buzzing sound. This is normal.
6. While ironing, the steam panels will be placed on the creases of the fabric, moving up and down to ensure the creases are removed.
7. If the sound of the garment steamer becomes louder and no steam is coming out, it indicates there is a shortage of water in the tank. Please check the water level in the water tank and refill it as needed.
8. The steam will stop when the steam button is released.

Cleaning and Maintenance

1. Remove the steam brush from the head of the garment steamer and clean it with a damp cloth.
2. Avoid using harsh or corrosive cleaning agents or solvents.

3. Do not immerse the garment steamer in water or other liquids.
4. Handle the steamer carefully. Do not drop, throw, or attempt to bend it. Avoid disassembling or attempting to repair electrical components.
5. Empty the water tank after each use.
6. Store the appliance in a dry place, away from damp areas.
7. Keep the steamer away from heat sources and direct sunlight.
8. Ensure the steam outlets are clean and free of any build-up or blockages.
9. For safe storage, place the garment steamer upright in a flat area, such as a cabinet.

Circuit Diagram

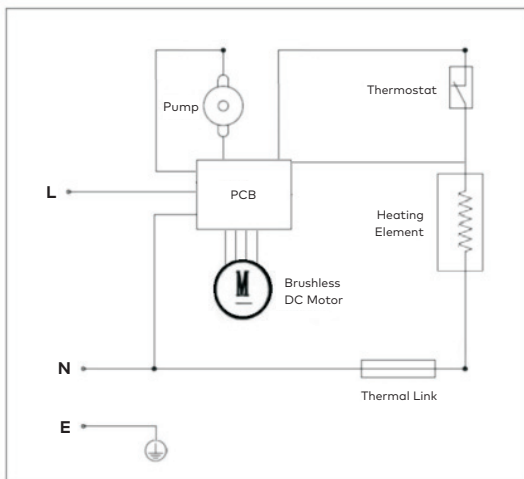

Issues	Reasons	Treatment method
The product does not work after being turned on	1. Unplugged power head	Ensure the power head is plugged in
	2. Household circuit failure or blown fuse	Have the product inspected and repaired by professionals
	3. Product circuit failure	Have the product inspected and repaired by professionals
No steam generated	1. Preheating not complete	Once the preheating is complete and the red light is constantly on, it is ready for use
	2. The steam switch hasn't been fully pressed	Press the steam switch fully, and the blue light will be constantly on
	3. The water level in the tank is too low, or the water pump is working loudly due to a blocked waterway	Clean it thoroughly, and then fill the water tank with water
	4. The water tank is not properly placed	Please place the water tank correctly
	5. The machine inverted, which prevents it from drawing water from the tank	Please place the machine horizontally
	6. The internal steam passage is bent or disconnected	Have the product inspected and repaired by professionals
	7. Heater damaged	Have the product inspected and repaired by professionals
Water dripping from Ironing head	1. Steam condensation is a normal phenomenon	It will disappear automatically after a few seconds
	2. Heater damaged	Have the product inspected and repaired by professionals
	3. The heater inside has a lot of scale	Stop the machine and clean the scale inside the heater

The steam indicator flashes after switch on	Overvoltage or overheat protection	The heating will automatically resume once the power supply voltage returns to normal
Suction speed indicator flashes	The machine is overheated or the voltage is abnormal	It can be used again after the machine cools down
The motor doesn't work	1. The machine is overheated or the voltage is abnormal	It can be used again after the machine cools down
	2. The motor or PCBA damaged	Have the product inspected and repaired by professionals
Suction weakened	The filter mesh blocked	Please clean the filter mesh

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Warranty

Products that you buy directly from our **Green Lion** website or shop come with a 24-month warranty.

When you buy **Green Lion** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at [**https://www.greenlion.net/warranty**](https://www.greenlion.net/warranty) and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

[**https://www.greenlion.net/warranty**](https://www.greenlion.net/warranty)

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

Website: [**https://www.greenlion.net/**](https://www.greenlion.net/)

Sales: [**sales@greenlion.net**](mailto:sales@greenlion.net)

Service Support: [**Support@greenlion.net**](mailto:Support@greenlion.net)

Telegram: [**@greenlion_global**](https://t.me/greenlion_global)

Instagram: [**@greenlion_global**](https://www.instagram.com/greenlion_global)